
BRISTAN

Installation Instructions and User Guide

Clicker Bath Waste
with Overflow

Models Covered:

W BATH12 C


**Please keep this booklet for future
reference.**

**Installer, when you have read these
instructions please ensure you leave
them with the user.**

Introduction



Thank you for choosing Bristan, the UK's leading taps and showers expert. We have designed this product with your enjoyment in mind. To ensure that it works to its full potential, it needs to be fitted correctly. These fitting instructions have been created to give you all of the information you need and, if you need any further help, please do not hesitate to give us a call on 0330 026 6273.

Installation

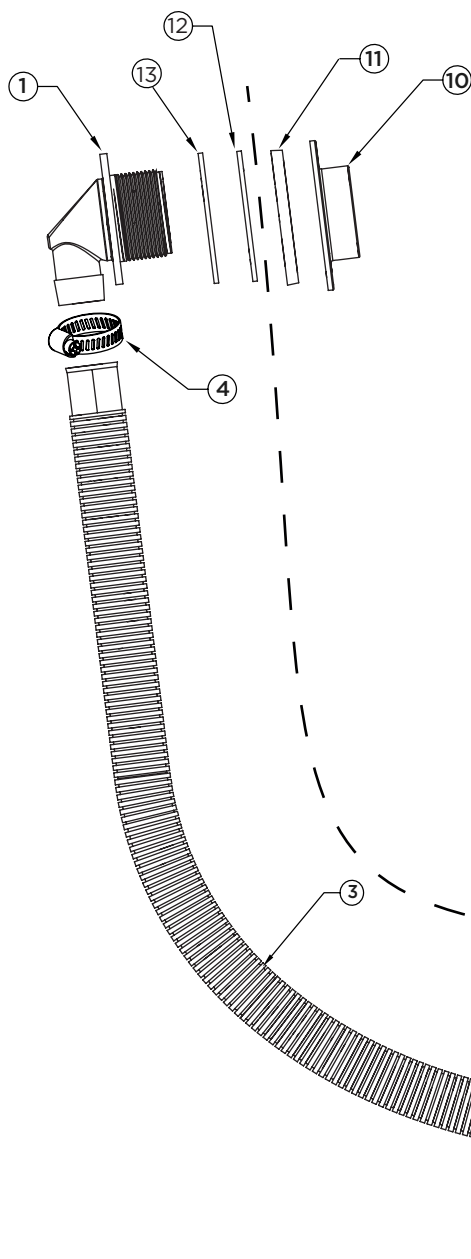

Components -

- | | |
|--------------------|--|
| 1. Overflow Elbow | 8. Underside of Bath Rubber Washer |
| 2. Waste Banjo | 9. Backnut |
| 3. 500mm Hose | 10. Overflow Face |
| 4. 2x Clamps | 11. Overflow Rubber Washer |
| 5. O-Ring | 12. Plastic Washer |
| 6. Waste Body | 13. Foam Washer |
| 7. Silicone Washer | 14. Clicker Mechanism |
| | 15. Waste Banjo to Backnut Rubber Washer |

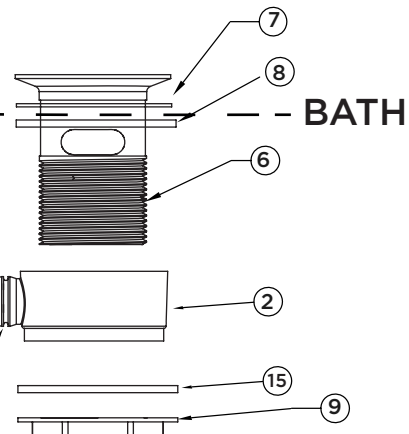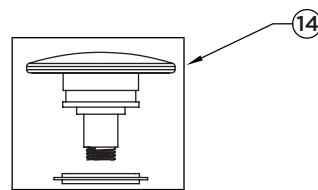

Installation

1. Identify all components are present prior to installation
2. Connect the overflow elbow (1) to the banjo fitting (2) using the plastic tube (3) and x2 clamps (4) as shown in the above diagram. Ensure the pipe is fully pushed onto the connections and fully over the O ring (5) to provide a secure connection, do not overtighten the clamps around the pipe to avoid damage.
3. Fit the waste body (6) and silicone washer (7) into the bath.
4. Place the first rubber washer (8) under the bath above the banjo (2) Make sure the second rubber washer (15) is between the banjo (2) and the backnut (9). Secure the backnut (9)
5. Fit the overflow cap (10) and rubber washer (11) to the front of the bath connecting to the foam washer (12), the plastic washer (13) and the overflow elbow (1) behind the bath.
6. In order to fill the bath, the cap (14) in the middle of the waste needs to be pressed down. To release water, press cap (14) again.
7. Check all joints and connections for leaks.

General Cleaning

Bristan products are made from premium materials, with hand polishing and electroplated finishes.

Your waste should be regularly cleaned with warm water, a mild pH-neutral liquid soap, and polished with a soft cloth. Any residues from soap, toothpaste, shampoos and shower gels can cause blemishes if not rinsed off straight after use.

Household bleaches and cleaners contain harsh chemicals and may damage the surface finish. Avoid using abrasive cloths, scouring pads, scrub sponges, steel wool or anything similar.

Some surfaces such as nickel and pewter may be affected by the dye found in some cloths, so it is also important to avoid hanging cloths on surfaces.

Issue: D4

Part Number: FI W BATH12

BRISTAN

Bristan Group Ltd.

UK: Bristan Group, B78 1SG.

EU: Masco Europe S.à.r.l.

14 Rue Strachen

6933 Mensdorf

Luxembourg

Customer Service: +44330 026 6273

Web: www.bristan.com

Email: enquire@bristan.com

A Masco Company

At Bristan, we want to make things as easy as possible for our customers. That's why we offer solid guarantees on all our products, effective from the date of purchase, to give you peace of mind.

To start your free guarantee simply scan the QR code and register your product.
Alternatively visit www.bristan.com/register.

For any other queries, please call our Customer Service on **0330 026 6273** where our expert team of advisors will be able to offer you any help and advice.

For full guarantee terms and conditions visit www.bristan.com/service-centre/guarantees.

